

UPD SMF Update Application (Mac OS X Intel)

Note: All files and other material contained in this folder are copyrighted by the Roland Corporation. Any alteration, modification, duplication, distribution, or reproduction of this material is prohibited. Additionally, Roland reserves the right to make changes to these programs and files without prior notice.

About the UpdSMF

- UpdSMF is a simple SMF (Standard MIDI File) player that runs on Intel based Macs running OS X.
- This SMF player is designed to be used only for updating and cannot be used to play back conventional SMF music data.

MIDI Interface

Before using this, you must first install the MIDI driver for your MIDI interface so that MIDI data can be transmitted. For the installation procedure, refer to the documentation of your MIDI Interface.

System requirements

- Operating System
Mac OS X v10.4 or later
- Computer
Apple Macintosh series computer with on-board USB

How to Use

1. Double-click the UpdSMF icon to start it.
 2. In "MIDI Out Device," select the MIDI output device that is installed.
 3. At the right of "SMF Folder," use the [Select] button to specify the folder that contains the SMF data.
Since the UpdSMF program will play back all SMF files in that folder, you should move or delete any SMF files in that folder that are not necessary for the update.
 4. Click the "Send" button, and the registered SMF files will be played back in the order of their names.
-